


INSTALLATION GUIDE - SERIES 012, 014, 016, 018, 020, 022, 024, 026

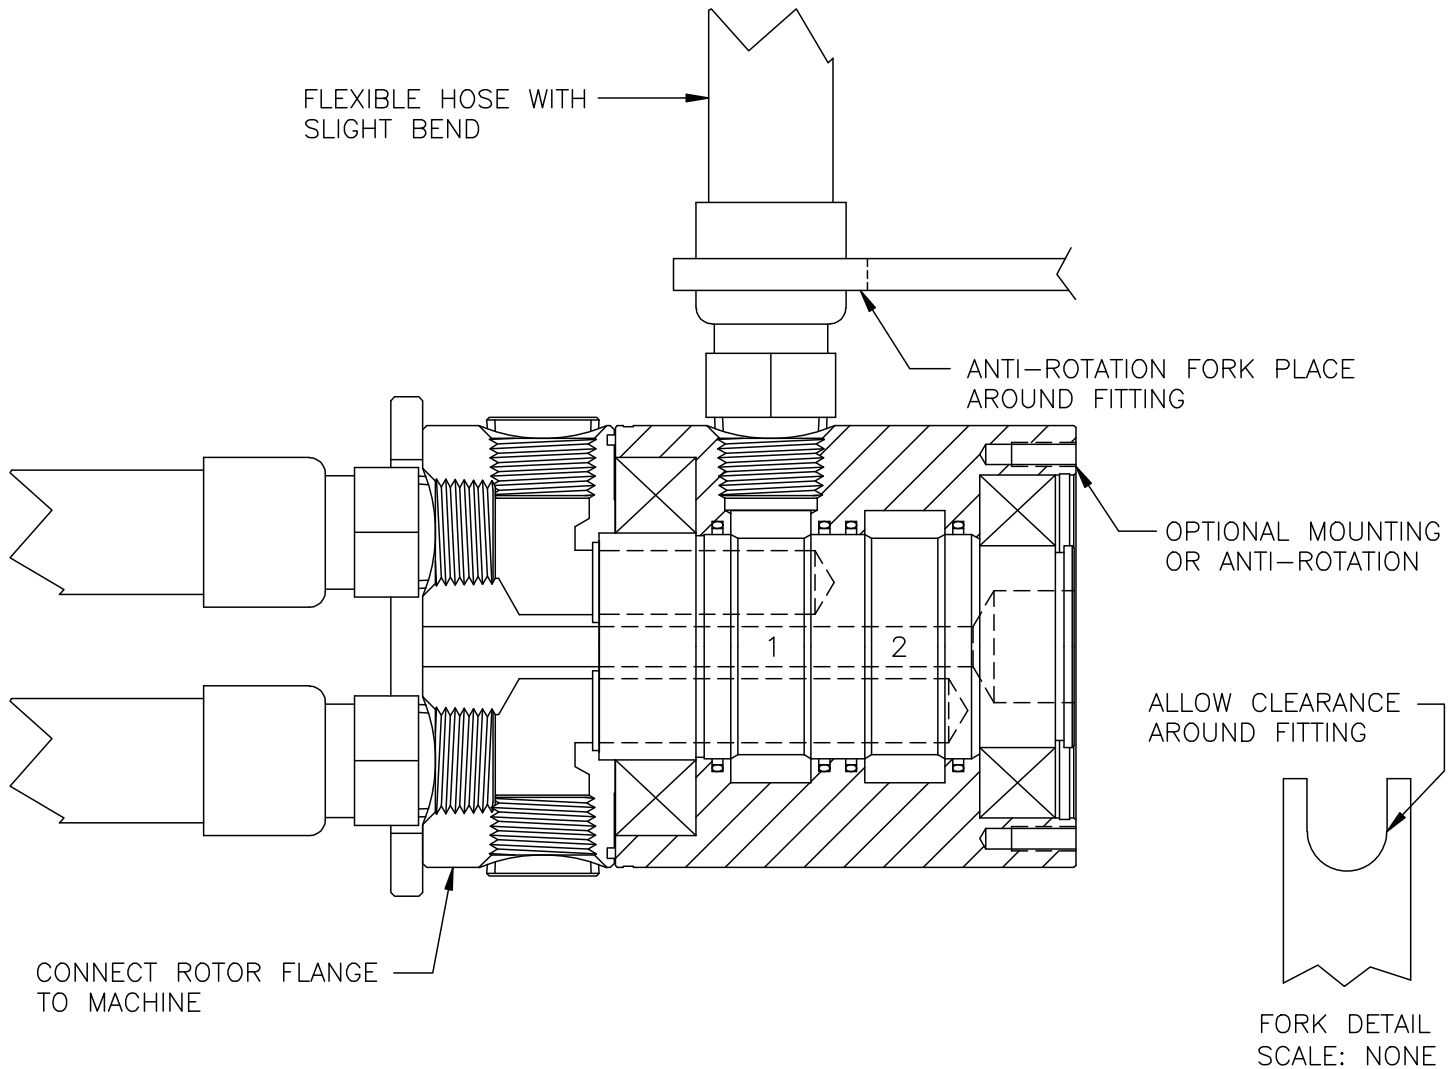

PROPER USE AND MOUNTING INSTRUCTIONS

1. Connect all fittings to housing prior to installation.
 - Do not use rigid piping as this will compromise the life of the union.
 - The hose should be flexible and have a slight bend.
 - Extreme bends can reduce the flexibility of the hose.
 - The rubber hose selected should be able to safely handle the working pressure.
 - The hose should be properly supported & should not side load the union.
2. Attach your preferred method of anti-rotation. Anti-rotation must allow the union to find its center. Do not hard mount both the rotor and housing of the union.
 - An anti-rotation fork placed around one of the housing fittings
 - An anti-rotation bracket mounted to the rear of the housing
3. Fasten the rotary union to the machine.



ROTARY
SYSTEMS INC